



### IP BOLD quick setup

Warning before starting to work with the unit. Please do not open the upper speaker grill to avoid losing the warranty.

Power supply: via PoE (according to IEEE802.3af) – point 8 below  
 or via an optional, external power supply adapter 12VDC/1A (recommended) or 12VAC/1A – point 6 below

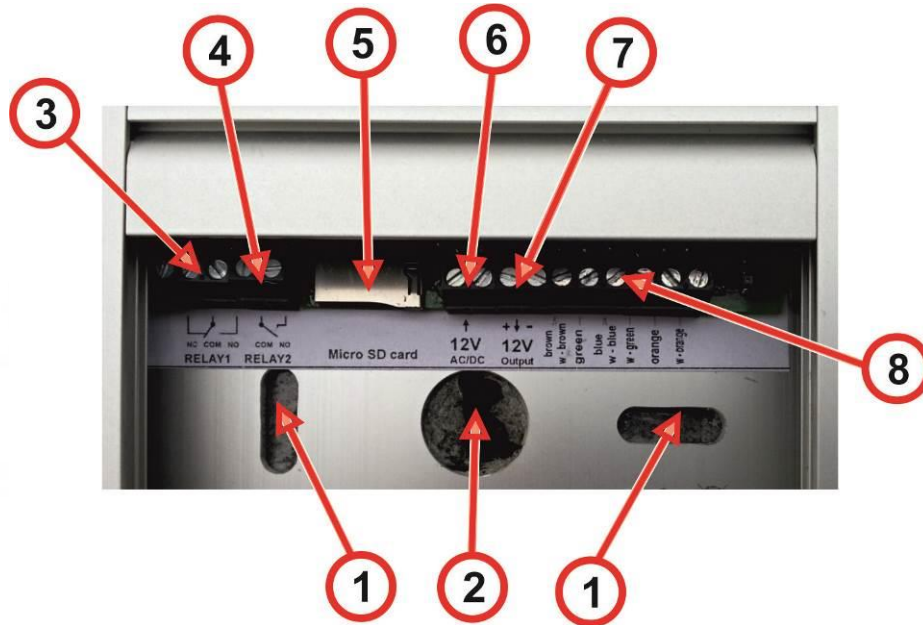

Ethernet UTP cable connection (point 8 above):

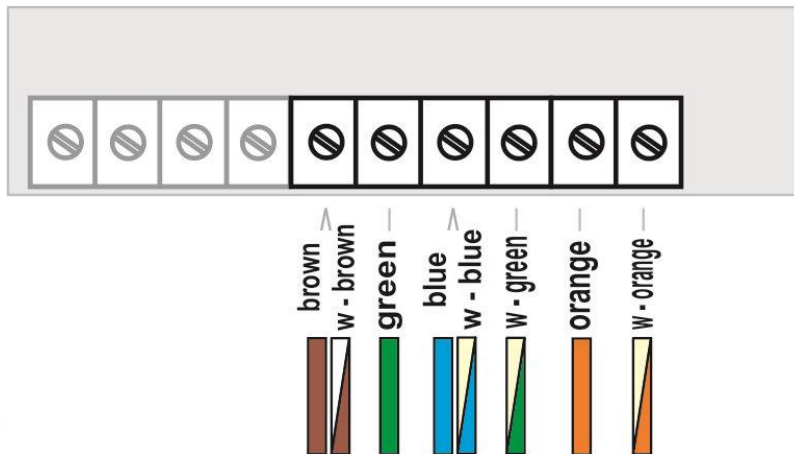

Default IP address: 192.168.1.250  
 User name: admin  
 Password: 1234

Latest firmware: <http://www.alphatechtechnologies.cz/en/firmware-update-ip-bold/>  
 Latest news including user's guide: <http://www.alphatechtechnologies.cz/en/products/voip-door-phones/ip-door-entry-phone-station-ip-bold/>

