

IP BOLD firmware upgrade

What is my current firmware version of IP BOLD doorphone?

Please check it in IP BOLD web interface, default IP address 192.168.1.250, Status page

192.168.1.250/status

ALPHATECH TECHNOLOGIES s.r.o.

IP BOLD

- Current status
- Network setting
- Basic settings
- Extended settings
- Service
- Video camera

Status

| | |
|-------------------------|-------------------|
| Display name | VV18 Guard |
| Firmware version | 3.0.36 |
| Buttons count | 1 |
| Keyboard connected | No |
| Camera connected | Yes |
| SD card size | |
| Card free space | |
| Customization | invalid |
| MAC address | 00:56:34:00:00:45 |
| Actual time | |
| Running time | 0d 0h 0m |
| Setup via DHCP | No |
| IP address | 192.168.1.250 |
| Network mask | 255.255.0.0 |
| Network gateway | |
| DNS server | |
| SIP mode | Peer-to-peer |
| Registration status | |
| SIP server | |
| Call active | No |
| Call duration | 0:00 |
| Calls count | 0 |
| Calls missed | 0 |

© ALPHATECH TECHNOLOGIES s.r.o.

Where do I find the latest firmware version for my IP BOLD doorphone?

Go to this page: <http://www.alphatechtechnologies.cz/en/firmware-update-ip-bold/>



○ when the upgrade has finished successfully, please do not forget to return the HW DIP2 switch to „OFF“ position, otherwise IP BOLD doorphone will keep resetting itself keeping its default values

- when the upgrade has finished, please make sure to restart the IP BOLD doorphone

You can also create your own style in the IP BOLD doorphone. An example style file can be found [here](#).

Attention!!! Below you can find IP BOLD VoIP firmware only. If you need to update any other VoIP doorphone, please go to [this page](#).

[V.3.0.36, 15.06.2015](#) - valid for IP BOLD only, please do not use it in any other IP doorphone

- Improved video for Grandstream phones
- Each call button can call to a group of up to 5 numbers in P2P mode, setup guide is [here](#)
- Setup video - after page reload, up-to-date values are shown
- Improved "Exposure software mode" in video setup

[V3.0.35, 12.06.2015](#) - valid for IP BOLD only, please do not use it in any other IP doorphone

- Exposure auto - Software mode - improves camera performance at direct sunlight exposure

How do I upload the new firmware?

Upload .firmware file this way:

ALPHATECH TECHNOLOGIES s.r.o.
IP BOLD

Firmware upgrade

Firmware version: 3.0.36
Choose firmware file:

upload .firmware file only, not a zipped file

to upload new firmware, please click here

Service
Restart
Configuration
Style and language
Firmware upgrade
Logfile
License
User acoustic tones

Video camera

Wait till the upgrade has finished successfully:

ALPHATECH TECHNOLOGIES s.r.o.
IP BOLD

Firmware upgrade

Firmware version: 3.0.35
Choose firmware file:

```
Stopping services...  
Check firmware file... done.  
Check boot... done.  
Check rescue... done.  
Check program... done.  
Store program... 37%
```

**Please wait until the
firmware upgrade process
has been finished
completely.**

Current status
Network setting
Basic settings
Extended settings
Service
Restart
Configuration
Style and language
Firmware upgrade
Logfile
License
User acoustic tones
Video camera

Successful upgrade is shown as follows:

ALPHATECH TECHNOLOGIES s.r.o.
IP BOLD

Firmware upgrade

Firmware version: 3.0.35
Choose firmware file:

```
Stopping services...  
Check firmware file... done.  
Check boot... done.  
Check rescue... done.  
Check program... done.  
Store program... done.  
Upgrading firmware successful
```

Current status
Network setting
Basic settings
Extended settings
Service
Restart
Configuration
Style and language
Firmware upgrade
Logfile
License
User acoustic tones
Video camera

Click on Restart button

ALPHATECH TECHNOLOGIES s.r.o.

IP BOLD

- Current status
- Network setting
- Basic settings
- Extended settings
- Service
 - Restart
 - Configuration
 - Style and language
 - Firmware upgrade
 - Logfile
 - License
 - User acoustic tones
- Video camera

Firmware upgrade

Firmware version: 3.0.36
Choose firmware file:

```
Stopping services...
Check firmware file... done.
Check boot... done.
Check rescue... done.
Check program... done.
Store program... done.

Upgrading firmware successful
```

Restart

© ALPHATECH TECHNOLOGIES s.r.o.

Wait till Restart has been completed

ALPHATECH TECHNOLOGIES s.r.o. 

IP BOLD

| | |
|-------------------|---|
| | <h2>Restart</h2> <p>Waiting for device start up ...</p> |
| Current status | |
| Network setting | |
| Basic settings | |
| Extended settings | |
| Service | |
| Video camera | |
| | |

© ALPHATECH TECHNOLOGIES s.r.o.

After restart, IP BOLD returns to its Status page, your IP BOLD has been upgraded

192.168.1.250/status

ALPHATECH TECHNOLOGIES s.r.o.

IP BOLD

Status

| | |
|---------------------|-------------------|
| Display name | VMP-Guard |
| Firmware version | 3.0.36 |
| Buttons count | 1 |
| Keyboard connected | No |
| Camera connected | Yes |
| SD card size | |
| Card free space | |
| Customization | invalid |
| MAC address | 00:56:34:00:00:45 |
| Actual time | |
| Running time | 0d 0h 0m |
| Setup via DHCP | No |
| IP address | 192.168.1.250 |
| Network mask | 255.255.0.0 |
| Network gateway | |
| DNS server | |
| SIP mode | Peer-to-peer |
| Registration status | |
| SIP server | |
| Call active | No |
| Call duration | 0:00 |
| Calls count | 0 |
| Calls missed | 0 |

© ALPHATECH TECHNOLOGIES s.r.o.